


D3451-041/-043/-045/-047 HANDLE & LOCK-DOWN ASS'Y

D3451-041 SUPERSEDES PREMIER P/N B67-43001-41 D3451-045 SUPERSEDES PREMIER P/N B67-43001-39 D3451-047 SUPERSEDES PREMIER P/N B67-43001-55

NOTES:

- 1) WELD PER DART QSI 004
- 2) CHEMICAL CONVERSION COAT PER DART QSI 005 4.1
- MASK BEFORE PAINTING.
- 4) FINISH: POWDER COAT PAINT GREEN SANDTEX (4.3.5.8) PER DART QSI 005 4.3
- PART IS SYMETRICAL ABOUT CENTER LINE.
 TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED
- ALL DIMENSIONS ARE IN INCHES
- 8) BREAK ALL SHARP EDGES 0.005 TO 0.010



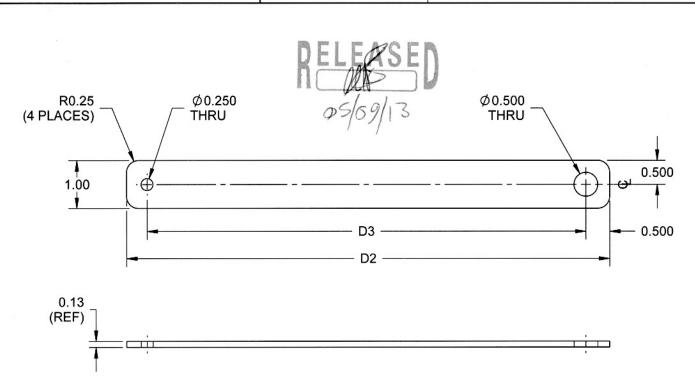

P/N	D2: CUT LENGHT	D3: HOLE SPACING
D3451-1	10.25	9.200
D3451-3	10.63	9.700
D3451-5	8.00	7.100
D3451-7	10.00	9.000

D3451-1/-3/-5/-7 TUBE HANDLE ARMS

D3451-1 SUPERSEDES PREMIER P/N B67-43001-303 D3451-5 SUPERSEDES PREMIER P/N B67-43001-301 D3451-7 SUPERSEDES PREMIER P/N B67-43001-101

NOTES:

1) MATERIAL: 6061-T6 (OR 6061-T651/T6510/T6511/T62) BAR

PER AMS-QQ-A-225/8 (OR AMS 4117/4128/4115/4116) OR PER AMS-QQ-A-200/8 (OR AMS 4160) (REF. DART SPEC. M6061T6B0.125)

2) PART IS SYMETRICAL ABOUT CENTER LINE.

3) TOLERANCES ARE PER DART QSI 018 UNLESS OTHERWISE NOTED

4) ALL DIMENSIONS ARE IN INCHES

5) BREAK ALL SHARP EDGES 0.005 TO 0.010

COPYRIGHT © 2005 BY DART AEROSPACE LTD.